



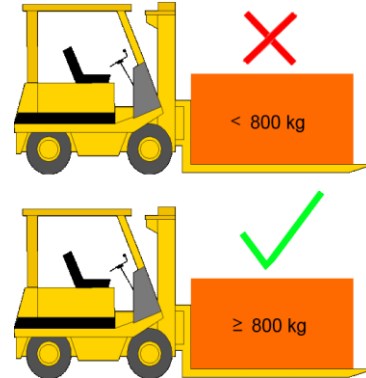


Quick installation guide

I • Installing the machine

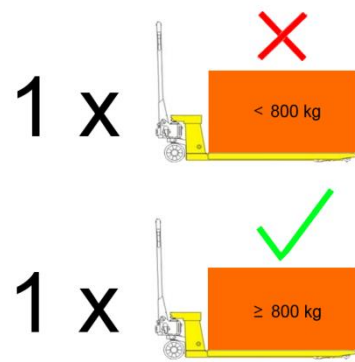

II • Operation

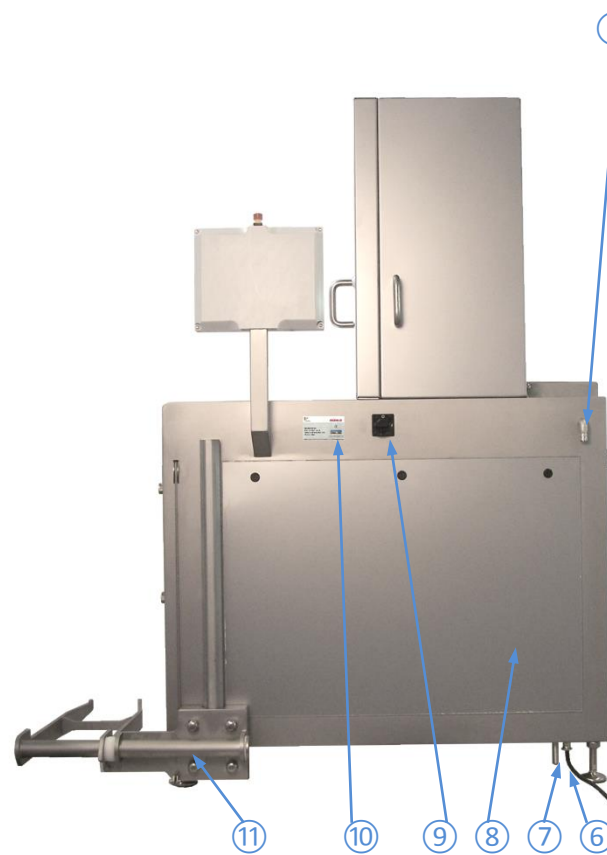

- 1) Cover
- 2) Emergency button
- 3) Operating panel
- 4) Fork lifting device
- 5) Water supply
- 6) Power supply cable
- 7) Cable protection
- 8) Side panel
- 9) Main switch
- 10) Type plate
- 11) Lifting device
- 12) Door internal brine chamber
- 13) Lifting device button
- 14) Brine mixer / Brine suction
- 15) Ultrasonic sensor
- 16) Access protection (outlet)
- 17) Access protection(inlet)



⑤ • Water supply

② • Emergency stop button


⑨ • Main switch




		DA 13	
		DN 13	
	(H ₂ O-Temp. = max. 30°C) (H ₂ O-Pressure = max 4 bar)		

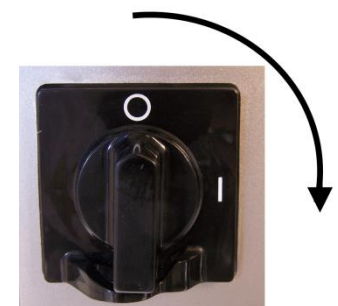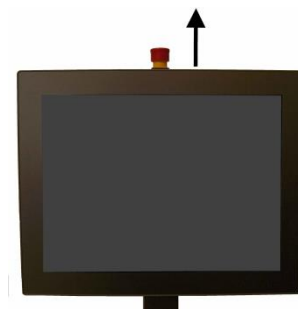

III • Internal cleaning

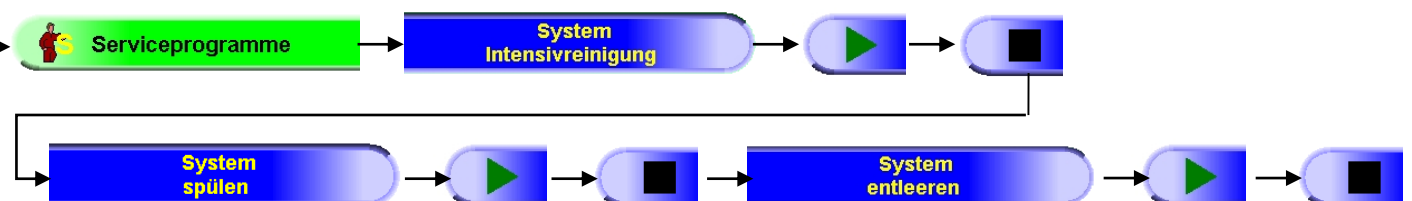


IV • External cleaning

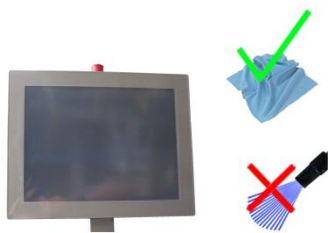

▶ • Recipe selection / Recipe start






Pökelprogramme

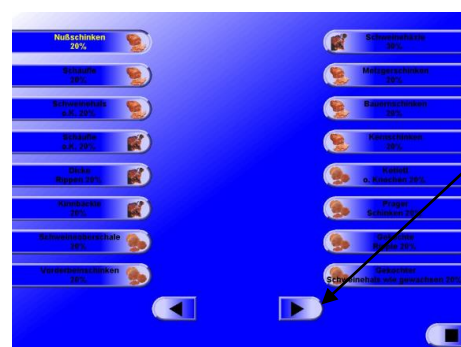

Recipe / Recipe name
 Scroll button recipes
 Exit
 Recipe start
 Recipe-editor
 Statistics


Schweinehals
 o.K. 20%

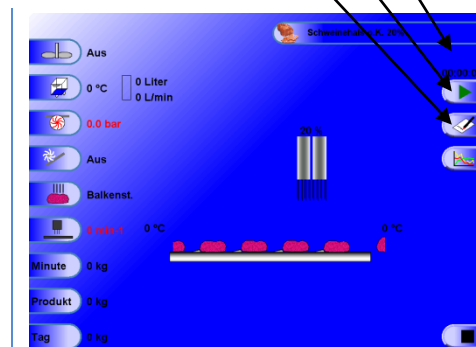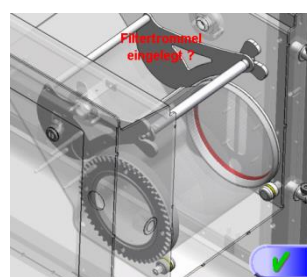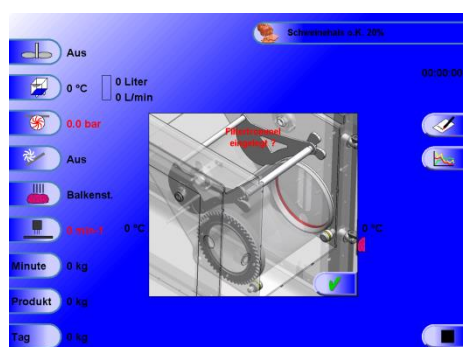

V • Programming recipes




Pökelprogramme

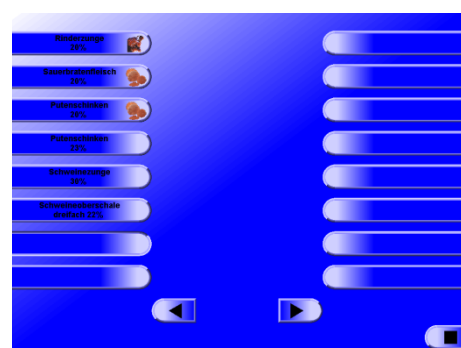

Schweinehals
 o.K. 20%

Modifying recipes


Creating new recipes

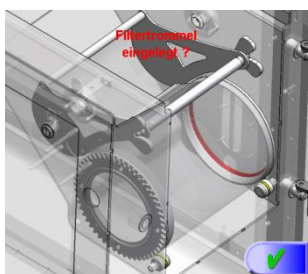

Recipe Editor



Factory setting
 Password = „0“

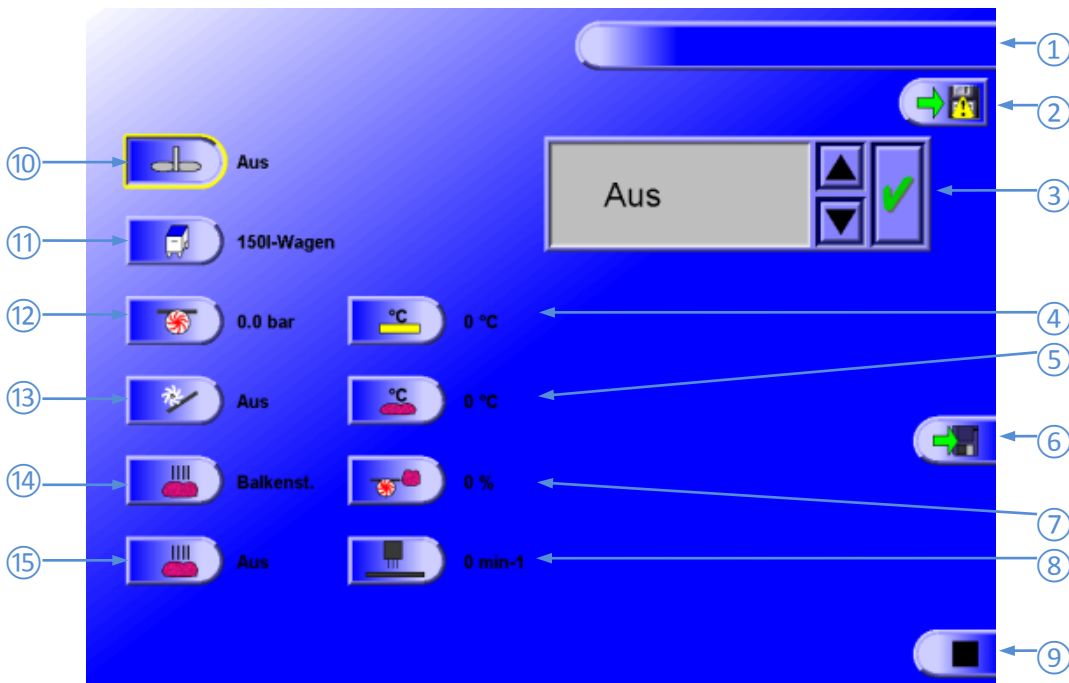

- | | |
|--|-------------------------------|
| 1) Recipe name (empty for new recipes) | 7) Injection rate % |
| 2) Backup | 8) Hubs injection / minute |
| 3) Selection / confirmation | 9) Back |
| 4) Brine temperature | 10) Brine Mixer |
| 5) Meat temperature | 11) Brine container selection |
| 6) Saving programmes | 12) Injection pressure |
| | 13) Brine processing |
| | 14) Selection injecting mode |
| | 15) Softer application |